


## MPC-P8 CHIP REPLACEMENT INSTRUCTIONS

**Removal:** Use an IC extraction tool or small pocket screwdriver to **carefully** remove the chip from its socket. If you use a small screwdriver, pry the chip up evenly so the pins are not bent during removal. Do not try to pull the chip from the socket with your fingers, you can bend or break the pins.

**Replacement:** Align the “notch” on the chip to the top of the board. Firmly press the chip into the socket, and then check for bent pins. If pins are bent, remove the chip, straighten the bent pints, and reinstall the chip.

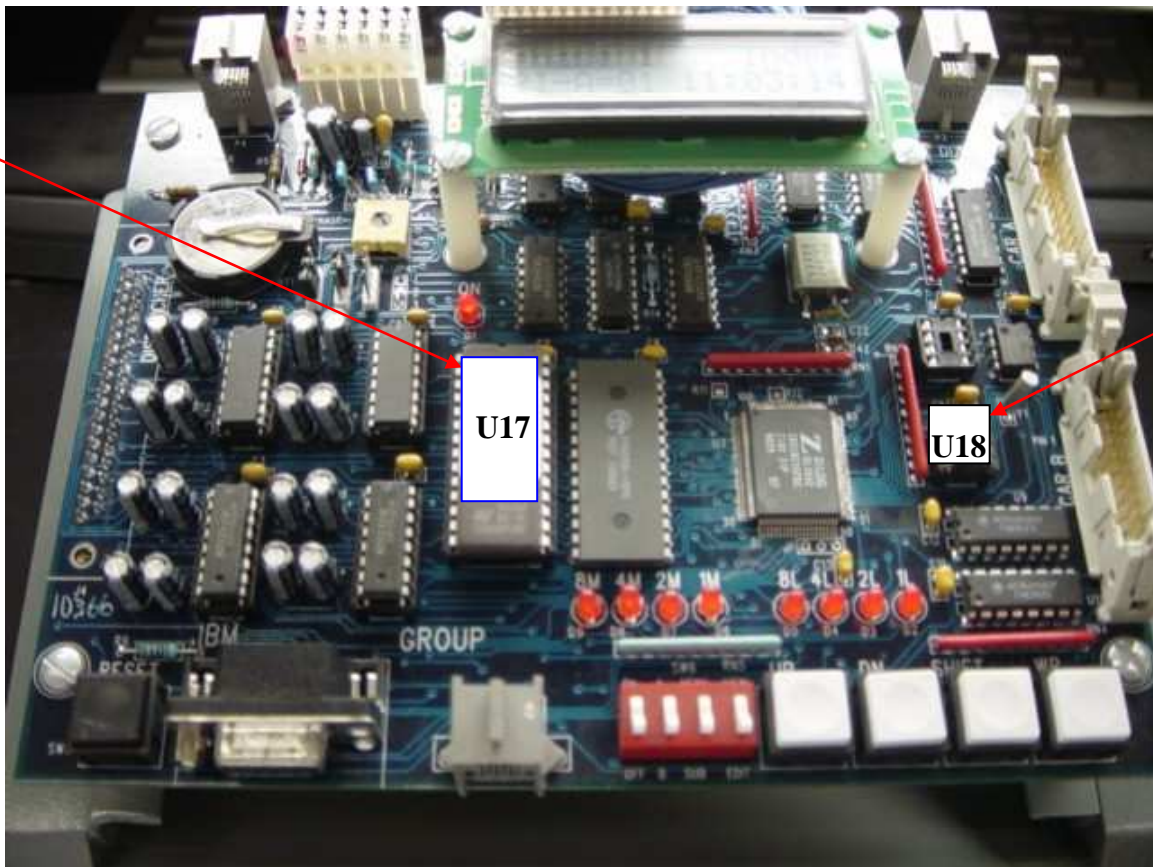

Program Chip (u17) Quantity: \_\_\_ Labeled: \_\_\_\_\_

Personality Chip (u18) Quantity: \_\_\_ Labeled: \_\_\_\_\_

Notes: \_\_\_\_\_

All information contained herein is confidential and proprietary to Elevator Controls Corporation. This document shall not be used or reproduced, in whole or part, without the prior written consent of Elevator Controls.